


DIRECTIONS: Please follow the SOFA specific flow rates, sump specifications, and flow path zone information below. The installation must conform to these minimum/maximum requirements including the SOFA dimension defined in Figure 1. The flow path zone is defined by dimensions A through E. Please write the Cover Model Number, orientation, and SOFA Model Flow Rating on the *VGBA DRAIN COVER IDENTIFICATION INFORMATION* label that comes with each AquaStar Pool Products, Inc. drain cover.


Cover Model Number:
Eclipse (PN 501003)



FIGURE 1 – SOFA MODEL & FLOW PATH

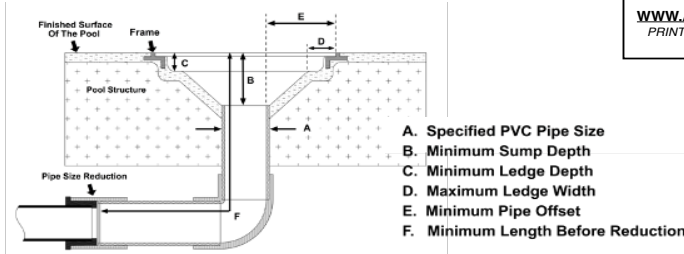

FOR MOST CURRENT INFORMATION
SCAN THE QR CODE OR VISIT
WWW.AQUASTARPOOLPRODUCTS.COM/FLOWCODE
PRINTED DOCUMENTS MAY NOT HAVE THE MOST CURRENT
FLOW RATINGS OR INSTALLATION OPTIONS.

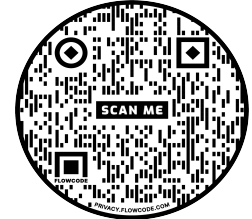

SOFA Model No.		Pipe Size (Nominal)	Pipe Depth (Minimum)	Orientation (Wall / Floor)	Flow Rating (GPM)	Head Loss Curve
Eclipse-20f_A-2b_B1.5_C0_D0_E.9_F16	[Sump P/N FC02xxx]	2" (b)	1.5"	Floor (f)	90	A
Eclipse-20f_A-2.5b_B1.5_C0_D0_E.9_F16	[Sump P/N FC02xxx]	2.5" (b)	1.5"	Floor (f)	90	B

Note 1: "SOFA Model No" nomenclature; bottom pipe = (b), side pipe = (s). See Fig 1 for capital letters A through E

Note 2: Head loss inHg is measured 16 to 24 inches from the finish surface of the pool. Reference Fig 1 dimension F.

